

# anculo

Operating software  
for X-ray systems





## Manual mode



### Would you like to adjust the radiation settings to the application?

You can adjust all parameters of the X-ray control system quickly and easily in manual mode. Data entries can easily be made using the mouse, keyboard or touchscreen. Clear symbols allow intuitive operation and display the operating mode of the X-ray system.


## Exposure program



### Do you always have recurring measurement tasks?

Exposure programs allow you to select given parameter sets for certain applications. You select the relevant program from a list and can start measurement tasks at once. Thanks to freely definable names and a brief description, you will find the right exposure program again quickly. A password protected area allows you to create new parameter sets or modify existing ones. Accidental modifications are prevented at the same time.

## Start-up programs

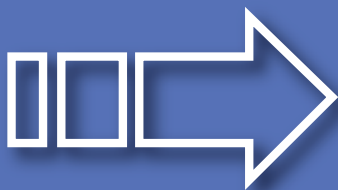

### Is your X-ray system offline overnight?

Extend the operating life of the X-ray tube by using the start-up program. Inconvenient warming-up of the tube is not applicable through manual settings. Different start-up programs are available, depending on the downtime of the X-ray system. In addition to standard programs which come with software, parameter sets can be adjusted to the associated tube type. Modifications here are also only possible after entering a password.

## Service





### Do your service technicians require information about the X-ray system?



The X-ray system setup data can be selected and set in service mode. A wealth of information about limit values and the status of the system is available for the service technician. Data sets for the most diverse X-ray tubes from different manufacturers can be provided.





Intuitive operation

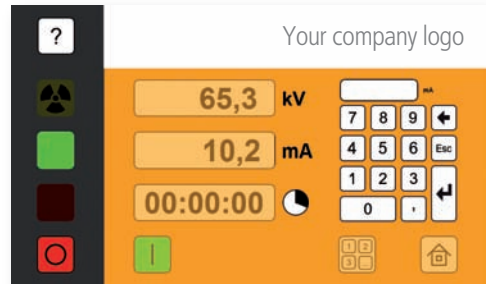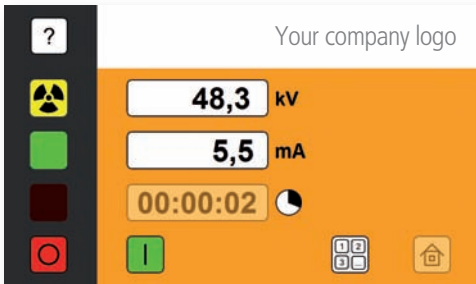


Recurring settings

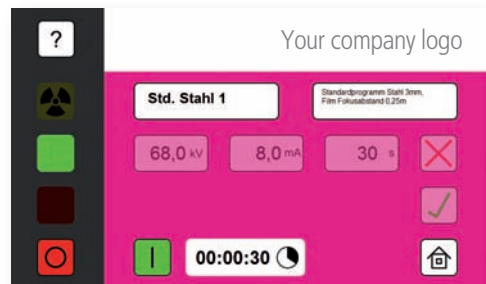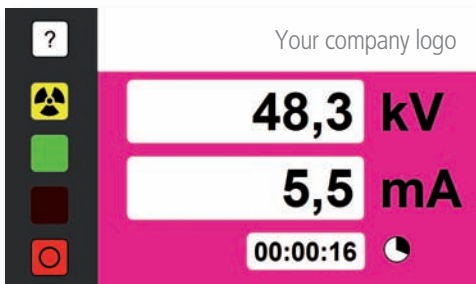

Convenient steps

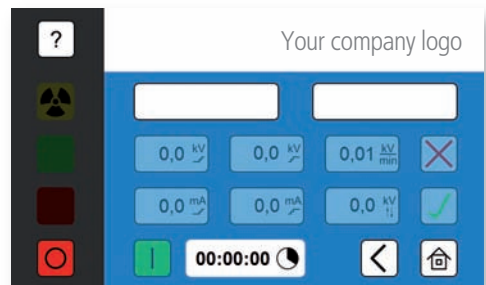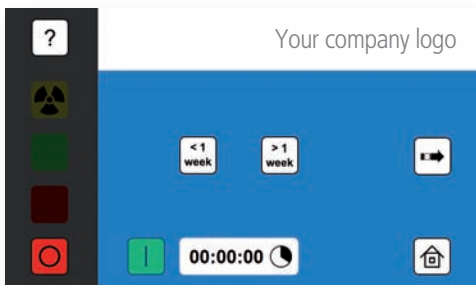

Easy to service

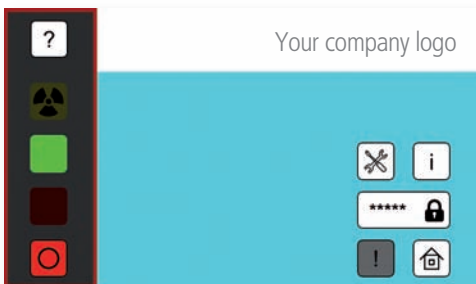

# anculo

audio - I listen  
video - I see  
anculo - I serve



Anculo is a new and intuitive user interface for X-ray generators. The user interface avoids the use of text. All operational steps are quickly accessible with pictograms. The software is therefore very easy to use all over the world, also for your service technicians.

The software can be used on a netbook and equally installed on a touchscreen-operated industrial control panel. Clear symbols and large displays signal the operating mode, even from a distance.

IMS Röntgensysteme GmbH  
Dieselstraße 52  
42579 Heiligenhaus  
Germany

Phone +49 2056 975 600

Fax +49 2056 975 601

[info@ims-roentgensysteme.de](mailto:info@ims-roentgensysteme.de)

[www.ims-roentgensysteme.de](http://www.ims-roentgensysteme.de)

